


■ PARTS IDENTIFICATION

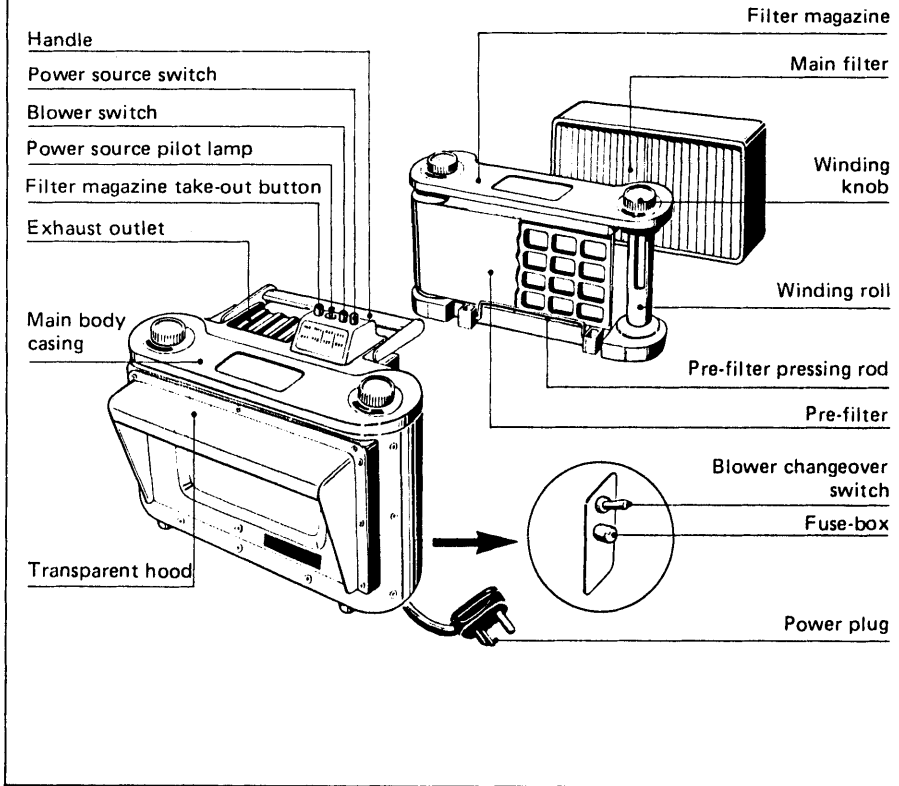

■ HOW TO USE

1. Insert the power plug into the plug socket. (AC 230V)
2. Push the power source switch. (Then the pilot lamp turns on.)
3. Push the blower switch.
4. Select Blower HIGH or LOW depending on the work condition.

■ Selection of Blower High or Low

Blower	Standard for selection	Suction range
Low	Soldering work of small pieces.	10 cm
High	<ol style="list-style-type: none"> 1. Soldering work of large pieces. 2. Where solder smoke is hard to absorb due to cross wind. 	25 cm