


■ CAUTIONS FOR USE

- The blower does not rotate unless the filter magazine is inserted.
- If the filter clogs, the suction power is lowered.
- Refrain from using this filter with any power source other than AC 230V.
- Be sure to insert the main filter into the filter magazine securely. (If the main filter comes off in the body, the filter magazine may become impossible to pull out of the body.)

■ SERVICE LIFE OF FILTER

1. When the suction power is reduced, turn the winding knob at the right side in the arrowed direction to renew the face of the prefilter with new one.
 - When the pre-filter is used up to the point of another 30cm remainder, the indication "Replace at another 30cm" comes out, and so follow the indication.
2. If the suction power is low even if the prefilter is renewed to a new face, please replace the main filter.

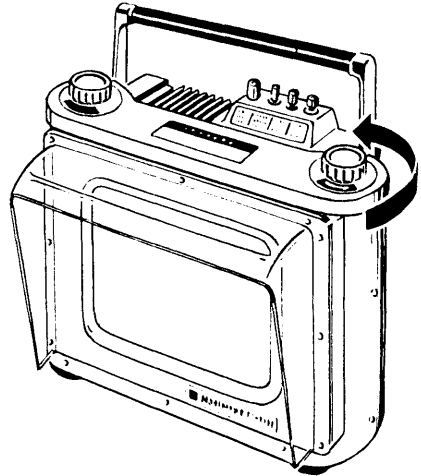

NOTE: The service life of pre-filter and mainfilter differs depending on the dust quantity in the ambient of use.

■ HOW TO REPLACE FILTER

1. Push the filter magazine take-out button.
(Then the filter magazine rises some 1cm or so.)
2. Pull the filter magazine upward.
3. Replace the filter in the order as shown below.
4. Insert the filter magazine into the body fully.